



Creative Image Products, Phoenix, Arizona

Patent Pending

Congratulations on ownership of the New Supermag 400 8mm film magazine for super 8mm motion picture cameras. The Supermag will accept super 8mm silent or sound film loads up to 400 feet. Load the magazine using a pre-loaded daylight film disk. (See daylight disk loading instructions)

STEP BY STEP LOADING PROCEEDURE:

1. Remove the magazine's film compartment lid.
2. Remove the module cover.
3. Use a pre-loaded daylight film disk. Slide the end of the film into the film track slot at the back end of the switch assembly. Allow a long leader of film, approximately 1 foot, so you can slip the film through the film gate area between the gate plate and the outer wall. Push the stainless steel gate plate back away from the gate window and slide the film down into the gate opening. Continue sliding the film down through the lower module until it is around the two small rollers at each corner of the module. Slide the film up through the film track slot and into the magazine's control switch assembly. Keep feeding the film into the switch until it exits from the left hand side of the switch assembly just below the movable roller.
4. Once the film has exited the switch assembly, take the end of it and feed it over the second roller and wrap it around the counter sprocket in a counter clockwise fashion. The film must be seated properly onto the sprocket. Allow enough film leader so it can wrap around the take up spool one and a half times in a clockwise direction.
5. Replace the take up spool onto the take up shaft, and replace the locking ring. The take up reel must be turned by hand clockwise, to make the film taut, so as to engage the roller switch. Run the motor for a moment to check the film movement.
6. Replace the magazine's film compartment cover and locking nut. Leave the module cover off. Your magazine is now ready to load into your camera. Place the magazine into the camera as you do a normal cartridge, gate first. **KEEP A TIGHT HOLD OF THE MAGAZINE DURING THIS PROCEDURE.** Make sure the film seats down into the gate and the gate plate is flat against the film. Check to see if the film is under the film sound gate rollers and in alignment with the module rollers. Replace the module cover and close the camera door. Run the magazine for a moment and check the counter. If the counter is working, the magazine is ready to use.

NOTE:

(The counter and motor switches must be in the on position during operation. Indicated by the small red LED and Counter display. If the counter is turned off the display resets to Zero.)
Enjoy your Supermag 400 for many years. Lets Make Movies!

Dave Sipmann
Inventor



Loading the Daylight Disk

In order to load the daylight disk, you must take out the plastic core and attach the film to the core. Slide the end of the film into the slot on the core and wrap the film counterclockwise onto the core with the emulsion side of the film facing outward from the core. The sprocket holes must be facing upwards. Wrap the film onto the core until the disk is full, but not touching the sides of the case. Slip the end of the film under the first plastic roller and up over the second roller and down and out the slit in the bottom cover. Replace the lid and cover cover screw. Place a small piece of non-transparent tape over the slit to hold the film down to the disk cover until you are ready to load the disk into the magazine.

Loading the magazine in normal or even subdued lighting is suggested. Avoid exposing the daylight disk directly to any bright light. The daylight disks are reusable over and over many times. Simply re-fill them.

Thank you for purchasing the Supermag 400 8mm film magazine. I hope you enjoy many years of film making experiences.

A handwritten signature in black ink, appearing to read 'David Sipmann', written in a cursive style.

David Sipmann

Inventor